

sWedge 20

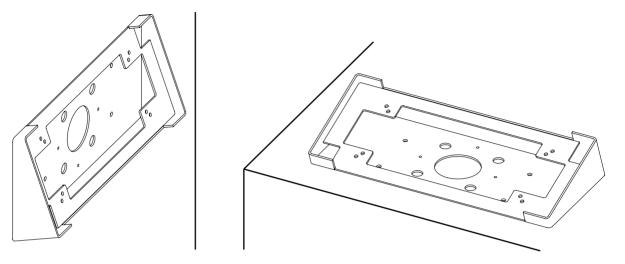


1. Place your **Triangle** on a wall or desk.

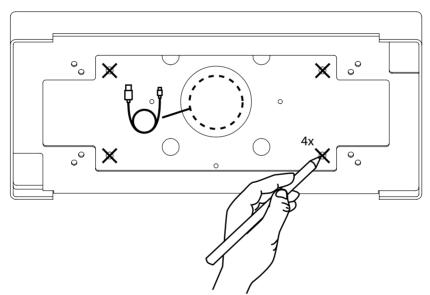


2. Mark holes for mounting and inwall charging cable.




3. Be careful with inwall electric cables and water pipes before drilling!

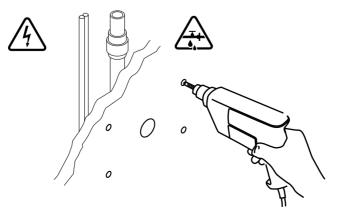


- **4.** Screw the **Triangle** on your wall or desk.
- **5.** After removing acrylic glass and photo from the sDock, connect it with the Micro-USB charging cable and place it over **Triangle**.

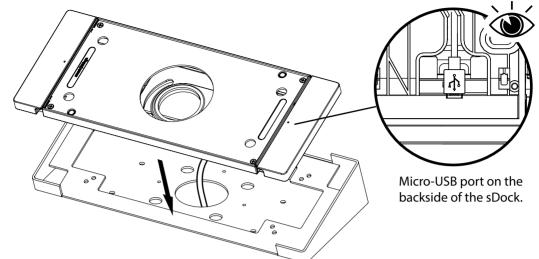

6. Use included screws to fasten the sDock on your Triangle by pressing down the frame.

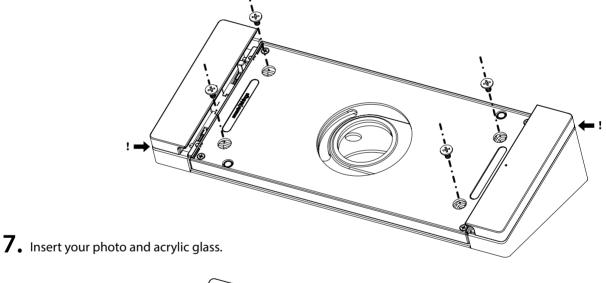

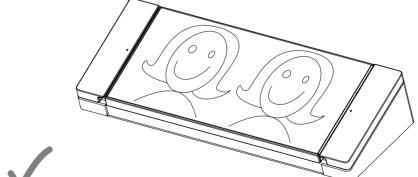



8. Ready!

smart things solutions GmbH Schulstraße 29 82234 Weßling, Germany www.smart-things.com